

# Atari 400 Demonstration Kit



## General informations

Genre	Intro / Demo	Year	?
Language	?	Publisher	Atari
Controls	Keyboard	Developer	Atari
Players	-	Country	USA
Programmer(s)	[unknown]	License	Commercial
Graphic Artist(s)	[n/a]	Medium	
Musician(s)	[n/a]	Rarity	
Cover Artist(s)	[unknown]	Serial	CX4198 / CX4199

## Tape



INSTRUCTIONS FOR THE  
**ATARI DEMONSTRATION PROGRAM**

**TWO TAPE DEMO**

1. Turn TV and ATARI 400 demonstration unit on.
2. Check that ATARI 410 Cassette Recorder is connected. Insert BASIC cartridge. PRESS SYSTEM RESET.
3. Insert the ATARI 400 Demonstration Cassette Program in the cassette recorder with either side facing up. Press REWIND and rewind tape fully. Be sure that you have the program cassette, not the audio cassette in the recorder.
4. Press PLAY on cassette recorder.
5. Type CLOAD using the computer keyboard. If you make a typing error, press SYSTEM RESET and type CLOAD again.
6. Press the RETURN key two times. As the demonstration program loads into the computer, adjust the TV volume to hear the program load. The program will take approximately 3½ minutes to load. If an error message appears on the screen or the cassette is not loading, press SYSTEM RESET and go back to step two.
7. When the program is finished loading, the recorder will stop and the word READY will appear on the TV screen. Insert the ATARI 400 Audio Track cassette in the cassette recorder. Press REWIND and rewind tape fully. Be sure that this is the audio portion of the demo.
8. Press PLAY on the cassette recorder. The audio cassette should now be setup to run with a voice track when anyone selects 4 from the selection menu.

ATARI 400 and ATARI 410 are TMs of ATARI, Inc.

**HOW TO STOP THE DEMO AND RESTART IT**


You can stop the demo by pressing the SYSTEM RESET key. Type RUN and press RETURN to start the demo again.

**HOW TO DEMONSTRATE SPECIAL FEATURES**

If you press 5 when the selection menu appears on the screen, the demo will show sections 1, 2, and 3 automatically. See screen display below. To allow section 4 to be played, stop the demo (described above) and restart it.

**USING THE AUDIO PORTION OF THE CASSETTE**

When "SYSTEM DETAILS" (number 4) is chosen, the tape recorder will play a recorded announcement. After about 25 of these announcements, the cassette will end. To continue using this feature, rewind the tape and load the demo again, starting with step three.

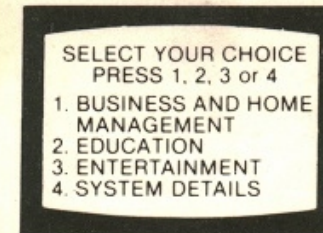

**SELECTION MENU**

NOTE: Pressing 5 will cause it to cycle automatically through Selections 1, 2, and 3. Pressing 4 will require that the audio portion of the cassette be set up.